



## ST-4480 & ST-4481 Adjustable Torque Instruction



1. Turn the tool



2. Take apart the front side and body



3. Take out the spare parts from the front side



4. Use the Allen Key put inside the spindle and use the spanner wrench to put into bottom adjuster to adjust torque.