

CE

SUMAKE®

**PNEUMATIC
TOOLS**



6" HOOK (VINYL) FACE ORBITAL SANDER OSG-60H(V)E

SPECIFICATION

Free Speed (rpm)	10000	Vibration EN 28662-1 & EN ISO 28927-3	Noise EN ISO 15744:2008	Remark
Power (HP / W)	0.24 / 179			
Air Consumption (cfm)	16	No-Load: 3.9 m/s ²	Sound pressure level 80 dB	Should wear an approved ear - protector and gloves while operating tool.
Air Hose	1/4"		Sound power level 89 dB	
Air Inlet	1/4"			
Overall Length (mm)	221.1			
Air Pressure (bar)	6.3			
Net Weight (kg)	0.94			

EC DECLARATION OF CONFORMITY FOR MACHINERY

Manufacturer: SUMAKE INDUSTRIAL CO.,LTD.

Address: 4F,-NO. 351, YANGGUANG ST., NEIHU DISTRICT
TAIPEI CITY 114, TAIWAN

**herewith declares
that:**

**6" HOOK (VINYL) FACE /
SELF GENERATED VACUUM
ORBITAL SANDER
OSN-60HE**

- is in conformity with the provisions of the Machinery Directive (Directive 2006/42/EC), as amended, and with national implementing legislation:

-and have been tested according to:
EN ISO 12100-1:2003/A1:2009, EN ISO 12100-2:2003/A1:2009, EN 792-8:2001+A1:2008

Taipei, Taiwan Apr / 02 / 2010



.....
Signature

MIKE SU

.....
Full name

Foreword

Sumake is a manufacturer and exporter of air tools since established. We have devote all our effort in improving quality and tools life. As well as the noise and vibration of tools. Bring all of your working efficiency, profits and enjoy using the tool is our principle.

Operator's instruction


■ Main Applications

- ▶ Finishing metal carts and products
- ▶ Finishing welded surface
- ▶ Trimming parts
- ▶ Finishing steel cabinets and furniture
- ▶ Foundation finishing prior to coating
- ▶ Finishing plastic products, glass and earthenware
- ▶ Finishing stone and decorative wood products
- ▶ Finishing sashes and other building material
- ▶ Light and medium duty auto, ship and aircraft finishing

■ Cautions for Use


○ Air pressure

Maximum performance is displayed at the proper sanding speed, obtainable at a gauge pressure of 6.2 bar. Range-wise, this is an air pressure from 5 to 7 bar (70 to 100 psi)

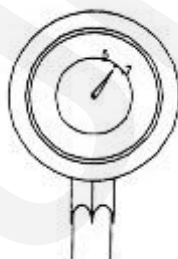


○ Air line

Use a 3/8" air hose between the compressor and the tool. Compressed air is cooled and its water content separated, as soon as the air leaves the compressor. A portion of the water content, however, is condensed in the piping, and can enter the tool mechanism, and may cause trouble. So, install an air filter and an oiler between the compressor and the tool. Use a 3HP or larger compressor.

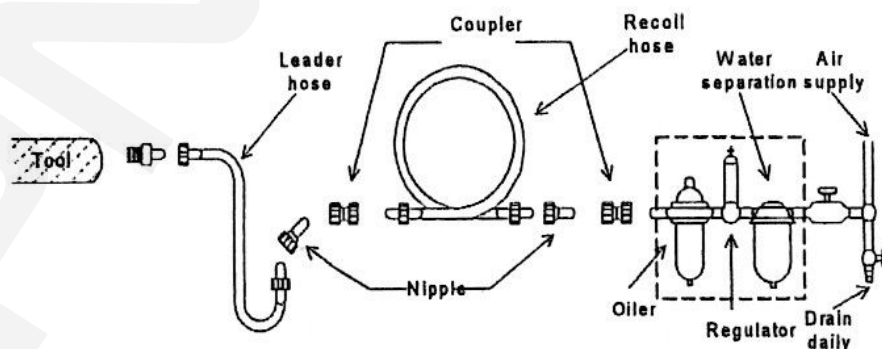

- Air hose

Clean the hose with a blast of compressed air before connecting the hose to air tool. This will prevent both moisture and dust within the hose from entering the tool and causing possible rust or malfunction. To compensate for unusually long hose (over 25 ft), the line pressure should be increased accordingly.

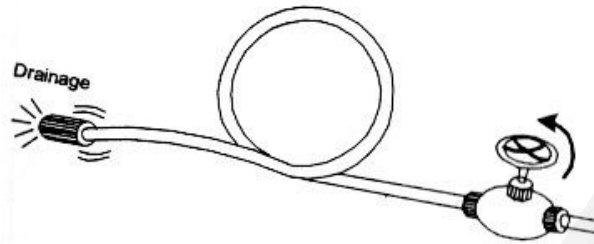

- Sandpaper

The specification of sandpaper ranges from #40 to #200. Also note that, the maximum operating speed which the sandpaper can afford shall be higher than the rotation speed of this tool.

- The approved eye protector, ear-muff, mouth-muffle, and gloves shall be worn when operate this tool.
- The working place shall be ventilative.
- Release the on-off device in the case of energy supply failure.


■ Operation, Adjusting and Replacing Method

- On-off device

The on-off device is on the top of this tool. It is a "hold-to-run" type. You can also adjusting the running speed by raising or lowering the lever. This tool stops rotation within few sec, after releasing the lever. For the sake of safety, place it on a level plate or on hanger after it completely stops.

- Sand Pad

If the sanding pad is no longer adhesive, you should change to a new one. To change for it, turn up the shroud and insert the supplied wrench to fix the screw bolt in the central then turn the pad as shown in the illustration below

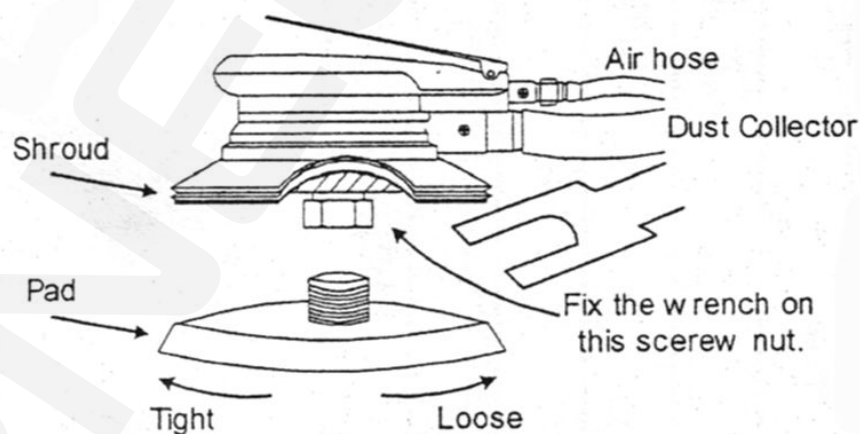

■ Maintenance

● Lubrication

Before connecting the hose, apply 4 or 5 drops of #60 spindle oil at the air inlet. Use of a thicker oil can lead to reduced performance or malfunction. If a thicker oil is used by accident, wash it away immediately. Also, every 3 or 4 hours of operation, oiling is necessary.

● Storage

Avoid storing the tool in a location subject to high humidity. If the tool is left as it is used, the residual moisture inside the tool can cause rust. Before storing and after operation, oil the tool at the air inlet with spindle oil and run it for short time.

● Disposal

If the tool is too seriously damaged to be used any more, drop it in a resource recycling can. Never drop it into fire.

● Ordering service Parts

For further operational and handling information or of replacement of parts and components, contact the sale agent from whom you purchased the tool or the service division of our company.

** In ordering parts and components, give each part number, name and quantity.*

Warning

- This tool is non insulated for coming into contact with electric power source.
- It is forbidden to use this tool in explosive atmospheres and do not put any combustible material near the workpiece since it emit sparks when grind with metal material
- Prevent long hair or loose clothing from drawing in while operate this tool.
- Never carry the tool by hose and beware of a whipping compressed air hose
- Rotating action can cause this tool to become hot. Allow to cool and disconnect air hose before any changing or adjusting
- It is not designed for wax polish.
- This tool stops rotation within several sec. After releasing the lever. For the sake of safety, put it on stable position after completely stop.

OSG-60H(V)E 6" HOOK (VINYL) FACE/SELF GENERATED VACUUM ORBITAL SANDER

